

# ESRUMMET

## EMPTYING THE COFFEE MACHINE TRAY



This sign means that  
the drip tray or  
coffee ground holder  
needs to be emptied.



POP OPEN THE MACHINE  
USING THE HANDLE  
ON THE RIGHT SIDE



OPEN THE FRONT  
COMPLETELY



PULL OUT  
THE DRIPTRAY



EMPTY GROUNDS  
in the Bio - Bucket  
BENEATH THE SINK  
AND WATER IN THE SINK